



RTD Attachment to PV Module

Doc 880053_A: Instructions for Kit 810162

1 Materials

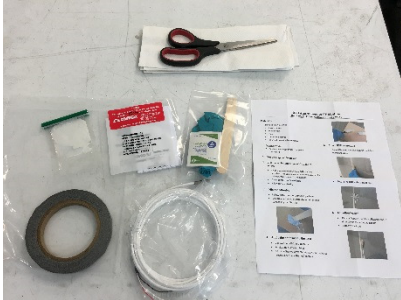

2 Locate RTD - center of cell and module

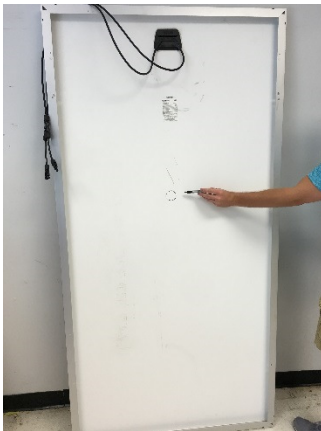

3 Clean and Dry Module and RTD



4 Mix epoxy per instructions




5 Apply epoxy - 1/4" (6mm) thick



6 Press RTD down to module



7 Secure RTD and cable with tape

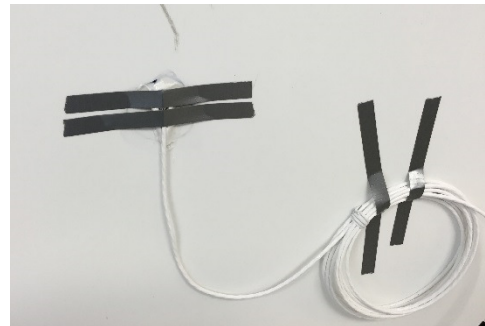

8 Let epoxy cure and remove tape

